


Godin

MONTREAL PREMIERE TRIPLEPLAY™

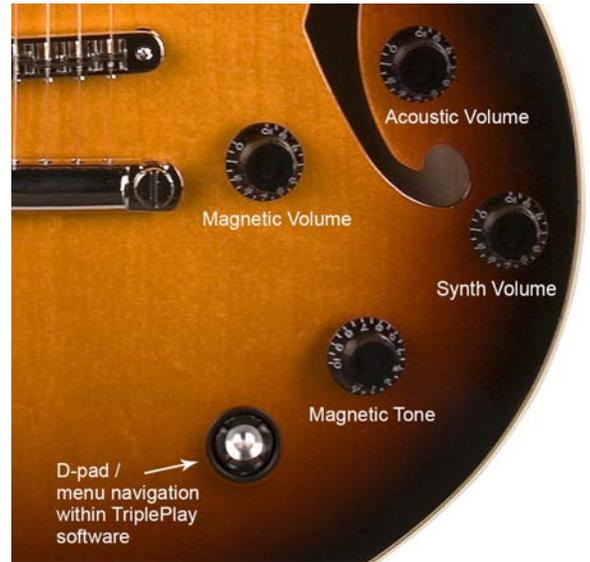


Important note:
"Turn Power ON"


To use the Fishman TriplePlay's "Acoustic/Mix" and/or "wireless synth" capabilities, the system must be turned "ON" via the switch (⏻) on the backplate. However, for playing straight electric guitar sound (magnetic pickups), the system does not need to be engaged.

Dual Output Jack Diagram: Electric & Acoustic/Mix options


Option A): Straight electric guitar sound (going to electric guitar amp).

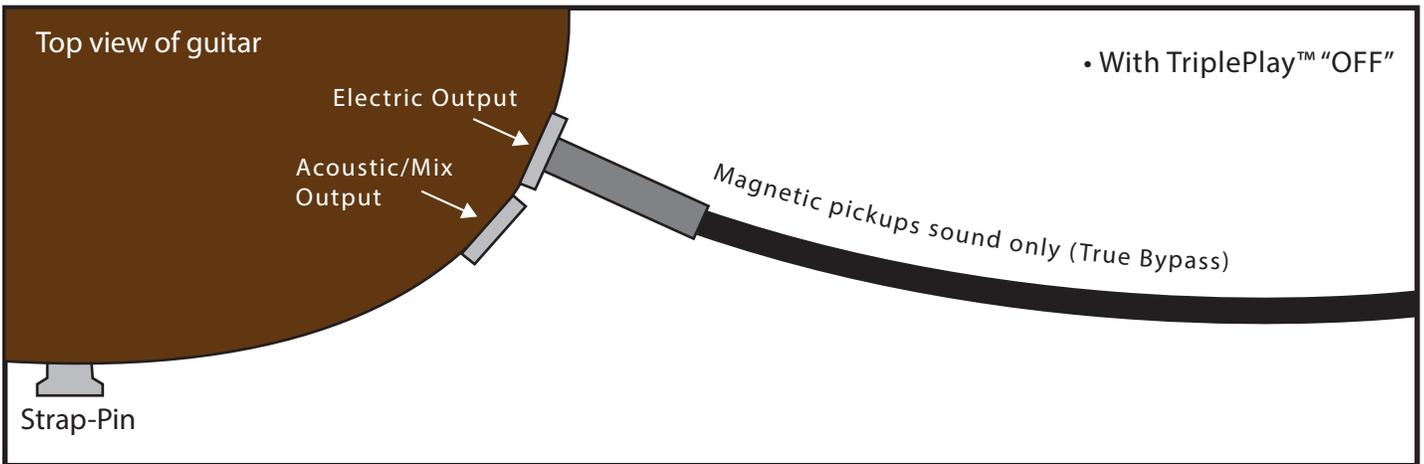


Option B): Electric & Acoustic guitar sounds (going to separate electric amp & acoustic amp or P.A. system).

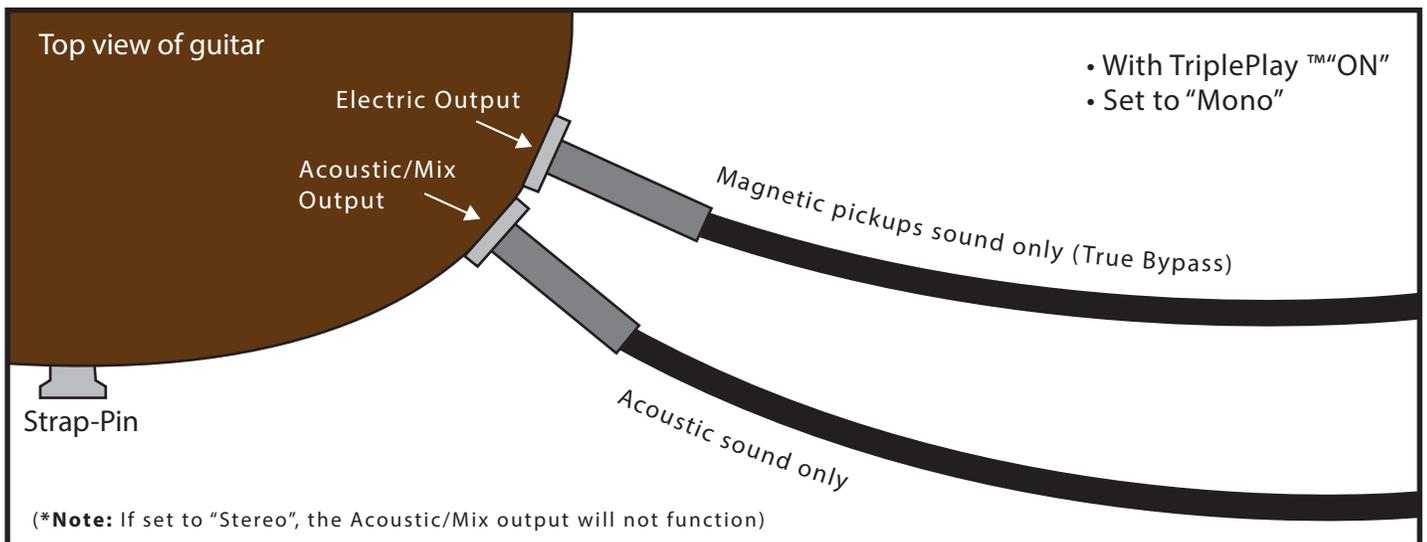

Option C): Mix output -
Electric & Acoustic guitar sounds (going to electric amp or P.A. system).

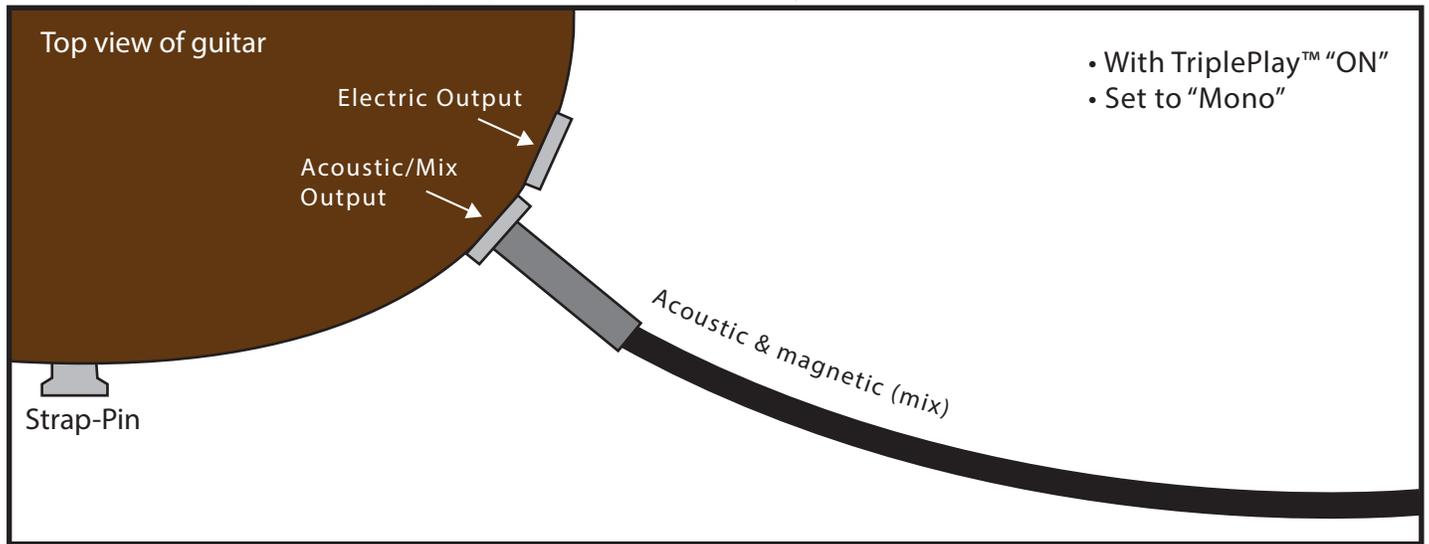

Option D): Stereo Y-Cable via mix output -
Electric & Acoustic guitar sounds (going to separate electric amp & acoustic amp or P.A. system).

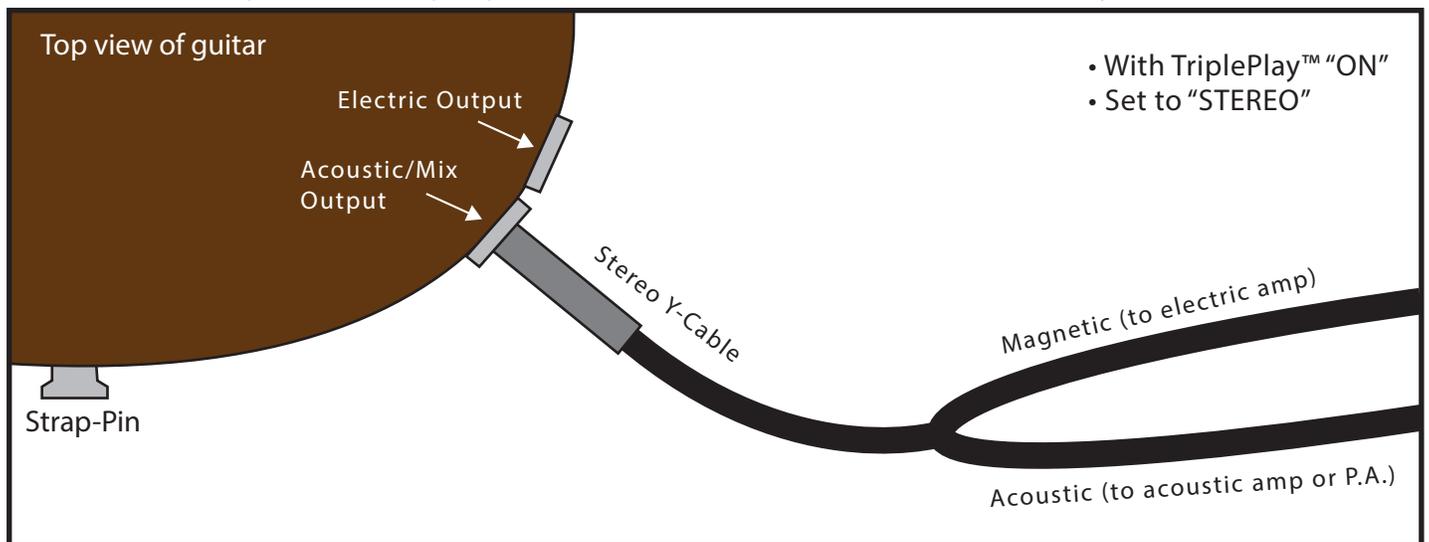

Important note:

"Charging the TriplePlay™ controller"

Easily recharge the Fishman TriplePlay™ system after extended use by plugging the supplied adapter into a wall outlet or into your computer via USB port.

- Approximate charge time: 90 minutes
- Charge duration: Approx. 18-20 hours of battery life.